


## ⚠ Before Operating

The *Operation & Maintenance Manual*, *Operator's Handbook* and machine signs (decals) provide proper operation and maintenance instructions. Failure to follow warnings and instructions can cause serious injury or death.

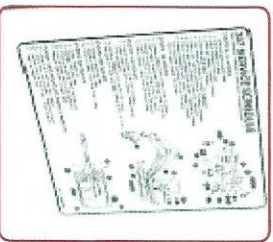

The service schedule chart on the machine provides service and maintenance instructions. Lubricate, grease and check fluid levels on the excavator as required. Check for leaks and broken or damaged parts before operating.

**Never smoke when fueling!**

Know the location and function of all safety features, interlocks, gauges and operating controls.

Activate the auxiliary hydraulics mode switch for hydraulic attachment operation.



Always fasten the seat belt snugly for restraint and lower the control console.



⚠ **Wear proper clothing and use personal protection equipment as required for the job.**

## ⚠ Servicing



Service and repair work should only be done by qualified service personnel.

## ⚠ Transporting the Machine and Attachment



Always drive up the ramp with the heavy end uphill (boom, dipper, etc.).

Engage the slew lock and secure the excavator and attachments using tie-downs and chains. Use a towing vehicle and trailer of adequate capacity.

## ⚠ Options and Accessories

Additional machine options and accessories are available (lift kits, enclosures, fire extinguisher, special application kits, etc.).



Bobcat Company • 250 East Beaton Drive • West Fargo, ND 58078

Bobcat® the Bobcat logo and the colors of the Bobcat machine are registered trademarks of Bobcat Company in the United States and various other countries.  
©2020 Bobcat Company. All rights reserved.  
B-1699 Printed in U.S.A.

Kr-1M-0320-70646-F



# RENT IT

**SAFELY** ⚠



**SAFETY RULES  
FOR BOBCAT  
COMPACT  
EXCAVATORS**

Know the equipment and the worksite before you operate.

Remember: Safe operation begins with the operator.



Scan the code to watch the compact excavator safety video.

*This brochure is also available in Spanish.*



# ! RENT IT SAFELY

## ! Know the Worksite

Understand and comply with applicable laws and regulations. Call local utilities before you dig: 1-888-258-0808.

- Know the location of underground gas, water and electrical lines.
- Inspect the work area for holes, drop-offs or unstable ground.
- Know the weight limitations of operating surfaces and clearances.

## ! Changing and Using Attachments



- Make sure the attachment is securely fastened to the excavator. Check that the X-Change™ system (if equipped) is securely engaged.



- The attachment signs (decals) and Operator's Handbook provide operating and maintenance instructions. Failure to follow warnings and instructions can cause serious injury or death.



- Use only approved attachments for the compact excavator.

## ! Getting On and Off Safely

Before leaving the operator's seat:

- 1 Lower the attachment to the ground.
- 2 Stop the engine.
- 3 Remove the key to prevent unauthorized starting.
- 4 Raise the control console.



- Use the grab-handles, tracks and skid-resistant surfaces when getting on or off the excavator.
- Do not jump off the machine.

## ! While Operating

Start the engine with the steering levers and hydraulic controls in NEUTRAL. Keep bystanders away.



- Move steering levers and pedals smoothly. The excavator will move in the direction of the blade when the steering levers are moved away from the operator.
- Keep your attachment low when traveling.
- Never carry riders.
- Do not exceed the rated lift capacity. Read and understand the lift capacity chart on the excavator.



## ! Keep bystanders away from the excavator and work area. Never lift a load over another worker.

- Always look in the direction of travel before moving the excavator or rotating the house swing (slew).



- Do not swing loads on a slope. Swing loads low and slowly. Do not travel across or up slopes that are over 15 degrees. Do not travel down or back up on slopes that exceed 25 degrees. Keep the boom centered.

## ! Keep hands and feet inside the operator's area. Never lean out the front of the cab with the engine running.

- Never operate the excavator's controls from the ground.
- Always sit in the operator's seat when activating the controls.



PREP

Bobcat

# TRAIN NOW

The Bobcat Compact Excavator Operator Training Course and a brief safety video are available in English and Spanish at [Bobcat.com/Training](http://Bobcat.com/Training)




PREP PERFORM

Bobcat





# Rental Condition & Delivery Report for Compact Excavators

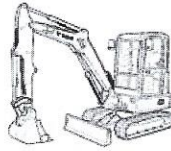

--

CUSTOMER		DATE	P.O. #
ADDRESS		PHONE	
		REQUESTED PICK UP DATE	
MODEL #	SERIAL #	UNIT #	HOURMETER READING
			OUT
			IN

Mark Appropriate Box

OUT	IN	CONDITION REPORT	OUT	IN	CONDITION REPORT			
		OPERATIONAL CHECKS (Steering/Hydraulic, etc.)			BATTERY/ELECTRICAL SYS/CHARGING			
		TAILGATE			CAB/CANOPY AND MOUNTING HARDWARE			
		BUCKET AND/OR ATTACHMENT			TRACK TENSION			
		SEAT BELT LATCHES PROPERLY			BOOM, ARM, BUCKET AND BLADE CYLINDERS			
		SEAT AND/OR CUSHION/ARM REST			RADIATOR CLEAR/COOLANT LEVEL			
		SAFETY DECALS/OPERATOR HANDBOOK			HYDRAULIC PUMP AND/OR FILTER			
		CONTROL CONSOLE LOCK AND UPPERSTRUCTURE SLEW LOCK (IF EQUIPPED) FUNCTIONAL			HYDRAULIC HOSES AND TUBELINES			
		X-CHANGE™ SYSTEM (If Equipped)			AIR FILTER/HOSE			
		SAFETY TREADS/GRAB HANDLES			TRAILER/TIE DOWNS/HITCH/LIGHTS			
		OIL LEVELS (Hyd., Engine Oil)			ATTACHMENTS			
		FUEL LEVEL			OTHER:			
		WORK LIGHTS (If Equipped)						
		LIGHTS: WARNING/HORN, MOTION ALARM (If Equipped)						
			<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">CHECKED BY</td> <td style="width: 30%;">OUT x _____</td> <td style="width: 40%;">IN x _____</td> </tr> </table>			CHECKED BY	OUT x _____	IN x _____
CHECKED BY	OUT x _____	IN x _____						
COMMENTS OUT: _____			COMMENTS IN: _____					
_____			_____					

## INSTRUCTIONS FOR THE RENTER

Read and understand the following instructions and information below for this machine.

1. \_\_\_\_\_ I understand the machine operation and the need to check for underground utility lines. I am aware of the availability of additional online training materials and videos.
2. \_\_\_\_\_ Forward motion of the travel lever will always move the excavator in the same direction as blade.
3. \_\_\_\_\_ **TO LEAVE THE EXCAVATOR:**
  1. Lower the work equipment and the blade to the ground.
  2. STOP the engine and remove the key (if equipped).
  3. Unfasten seat belt.
  4. Raise the control console.
4. \_\_\_\_\_ Operate ONLY from the operator seat. Keep feet inside cab.
5. \_\_\_\_\_ Fasten seat belt securely.

6. \_\_\_\_\_ This machine has safety signs (decals) and Operator's Handbook for operation and maintenance. Owner's and Safety Manuals are available.
7. \_\_\_\_\_ This excavator has a rated lift capacity chart to determine the load that can be lifted by the excavator.
8. \_\_\_\_\_ I understand how to operate on slopes and to keep attachment **LOW** when traveling.
9. \_\_\_\_\_ Right side window can be used as an emergency exit.
10. \_\_\_\_\_ I understand how to use the attachment and blade. I understand the operation of the X-Change System (if Equipped).
11. \_\_\_\_\_ A Special Applications Kit is available to restrict material from entering cab openings if job use requires this.
12. \_\_\_\_\_ Top guard, purifier muffler, fire extinguisher kit, motion alarm and other options are available for job use.
13. \_\_\_\_\_ I understand the maintenance procedures for this machine including the recommended fueling procedure.

I understand the operation and maintenance of this machine

X \_\_\_\_\_


Customer Signature

Date



### CONDITION OUT REPORT

Note any damage to equipment by highlighting the area of the machine and describe the specific damage under comments. Have customer sign in comments section below acknowledging area damaged.


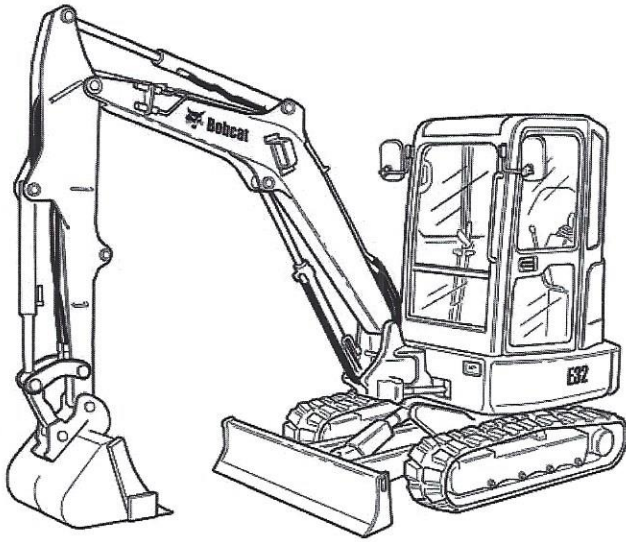


Comments: \_\_\_\_\_  
\_\_\_\_\_



### CONDITION IN REPORT

Note any damage to equipment by highlighting the area of the machine and describe the specific damage under comments. Have customer sign in comments section below acknowledging area damaged.

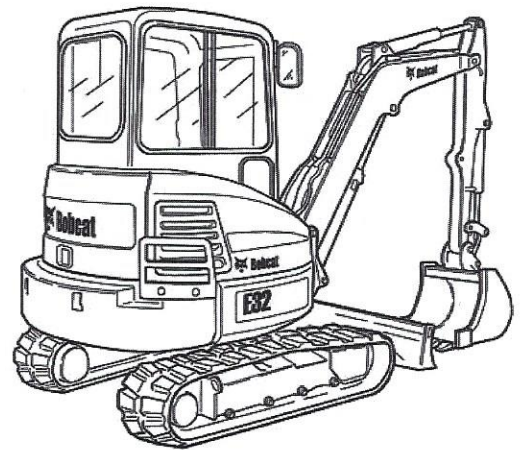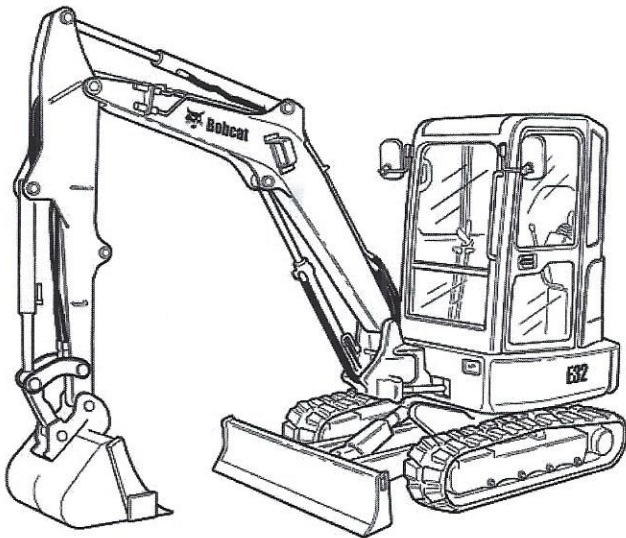

Comments: \_\_\_\_\_  
\_\_\_\_\_