

6. The Anion Indicator: When lit, the Anion function is ON, when unlit, the Anion function is OFF.
7. Timer Button: Activates the CoolBox TIMER feature, allowing you to either start the unit from a start-up set after a certain number hours or stop the unit after a certain number of hours.
8. Anion Button: Turns the ANION function ON or OFF, as indicated by the Anion Indicator.
9. Remote Receiver LCD: Indicates a command received from the remote control.
10. Low Water Indicator: This warning light will let you know when it is time to refill your CoolBox, and if the water gets too low, a buzzer will sound and the COOL mode will stop. No buzzer will come on if you are in VENTILATION mode.
11. Show Ventilation Indicator: Indicates the level of ventilation being used by the CoolBox.
12. Timer Indicator: When lit, indicates the TIMER function is active.
13. Swing Indicator: When lit, indicates the CoolBox SWING function is active.

WHAT THE TIMER FUNCTION DOES:

1. Starts your CoolBox cooler automatically after n hours from the stand-by state; **OR**,
2. Stops your CoolBox cooler automatically after n hours after being turned ON.

Note: the TIMER function can only be set by the hour.

USING THE TIMER:

1. Press the TIMER button.
2. You will notice that the TIMER button begins to flicker & you will see that "H x" appears in the TEMPERATURE display.
3. To increase the number of hours, hit the SPEED button on the panel.
4. You **cannot** set the timer for more than **9 hours**.
5. Once the desired hours are set, **do not press any other buttons**, after 5 seconds the TIMER will activate.

DISABLING THE TIMER:

1. Press the TIMER button.
2. Set the number of hours to "0"; 3. If you wish, you can also hit the POWER button while the TIMER button is flickering.
3. Alternatively, you can hit the POWER button after the TIMER has activated, and then hit the POWER button again.

When in Stand-By mode, the TIMER function will count down to power ON the CoolBox. If the CoolBox is already on, the TIMER function will count down to turn OFF your CoolBox unit