



Pyramid Flame Heater

To Light Heater

1) Open side panel and be sure that the LP regulator is properly engage into the propane tank.

2) Be sure the control knob on the heater head is in the "OFF" position.

Turn the tank valve in a counter-clockwise direction to open. If the regulator assembly is not properly engaged into the tank the flow of gas will be interrupted by the safety shut off device. No gas will go to the heater.

4) Gently depress the control knob on the control panel and rotate it counter clockwise to the "PILOT" position, and hold for 1 full minute.

5) Push the igniter to generate spark while keeping the control knob in depressed position.

6) Check for pilot flame through glass tube. If pilot does not light, turn control knob to "OFF" position, and wait two

minutes to try again from step 4. Several attempts may be necessary.

7) The burner may now be turned on to the full "HIGH" position for maximum heat output or it may be turned back to reduce heat output and fuel consumption. If you turn the control knob all the way back to the "PILOT" position the main burner will go off and the pilot flame will remain lit, you then re-ignite the main burner directly from the "PILOT" position.

Please Note: If flame is not strong enough, you will need to restart the Heater by first turning off the burner valve, then turning off propane tank. Check to make sure that the regulator is securely fastened to the propane tank, and there are no leaks in the line going to the Heater. Wait 30 seconds, then open propane tank before opening the burner valve. Then light the Heater.

If you turn the heater off and then have to re-light

1) Turn control knob to the "OFF" position.

2) Wait at least FIVE minutes before attempting to relight heater. The safety system built into the heater will not allow you to immediately re-light the heater directly from the "OFF" position. Please do not try to defeat this safety system.

3) Repeat starting with STEP #4. You should not have to wait more than few seconds to re-light the "PILOT" light and then ignite the main burner.

To Turn Off or Shut Down Heater

- 1) Turn the control knob in a clock-wise direction to the "OFF" position. You may hear a slight popping sound when the main burner shuts down. This is normal.
- 2) Open the side panel and turn the valve on the top of the propane tank in a clock-wise direction to turn it off.